



Assembly & Startup Instructions for Softener Systems with Fleck 5600 Valves

1. Media Loading Instructions

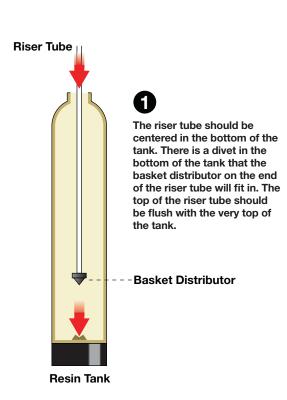

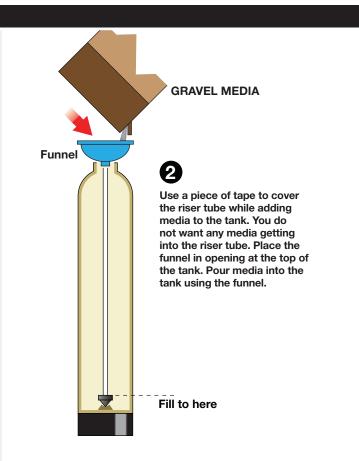

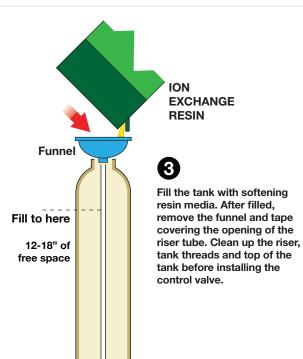

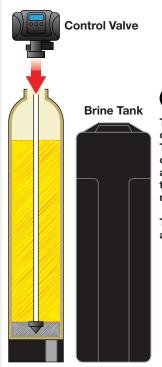


Thread the control valve on to the top of the tank. The control should thread on easily. If you feel any abnormal resistance, check to make sure the control is not cross threaded.


The system is now assembled and ready for installation.

2. Valve & Bypass Components




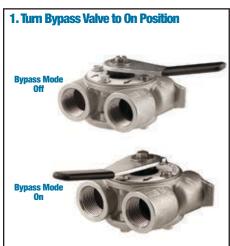



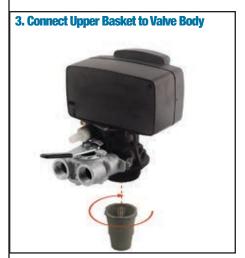



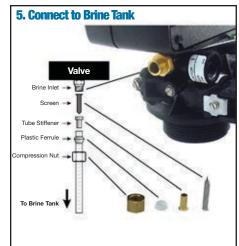

3. Plumbing Connection & Startup

- 1. Connect plumbing to the system with the bypass knobs in the bypass position (perpendicular to the plumbing). Turn on the water to the house and check all connections for leaks.
- 2. Initiate the backwash cycle on the filter valve. This is done by pressing the diamond shaped button on the face of a digital valve. The backwash cycle is initiated on a mechanical valve by turning the dial clockwise to the first position.
- 3. Once the valve is in the backwash mode, open the bypass handles half way and allow the tank to fill with water.
- 4. Open the bypass valves all the way once water begins to flow through the drain tube.
- 5. Allow system to complete the backwash and regeneration cycles on its own. It will return to service once this is done.

*Note: The system should be ready for use once the backwash cycle is complete. You may have to initiate a second backwash cycle on very large systems if there is a discoloration to the water. It is normal to see very small air bubbles in the water when new systems are installed. These tiny bubbles can give the water a greyish cast. However, they do quickly dissipate in a clear glass. These bubbles will go away once the system becomes thoroughly saturated. This could take several days depending upon water usage.