


# Step 1:

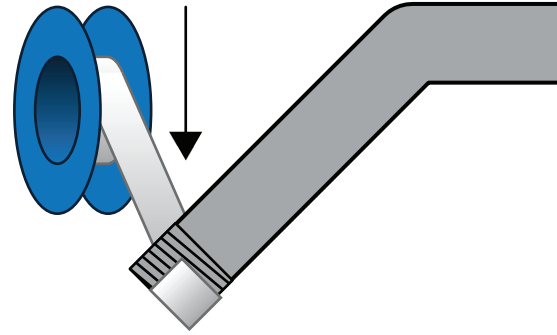

Wrap teflon tape  
10 times clockwise around  
shower head pipe after  
removing old shower head.

## Thread Tape



# Step 2:

Screw on shower head filter  
and check for leaks.

