


Non-Backwashing 1" Whole House Filter

Installation Diagram*

*Shown with Optional By-Pass using SharkBite Valves and Piping. Many other plumbing material options are available and can be easily connected to the system. A working pressure reducing valve must be installed before any water treatment equipment.

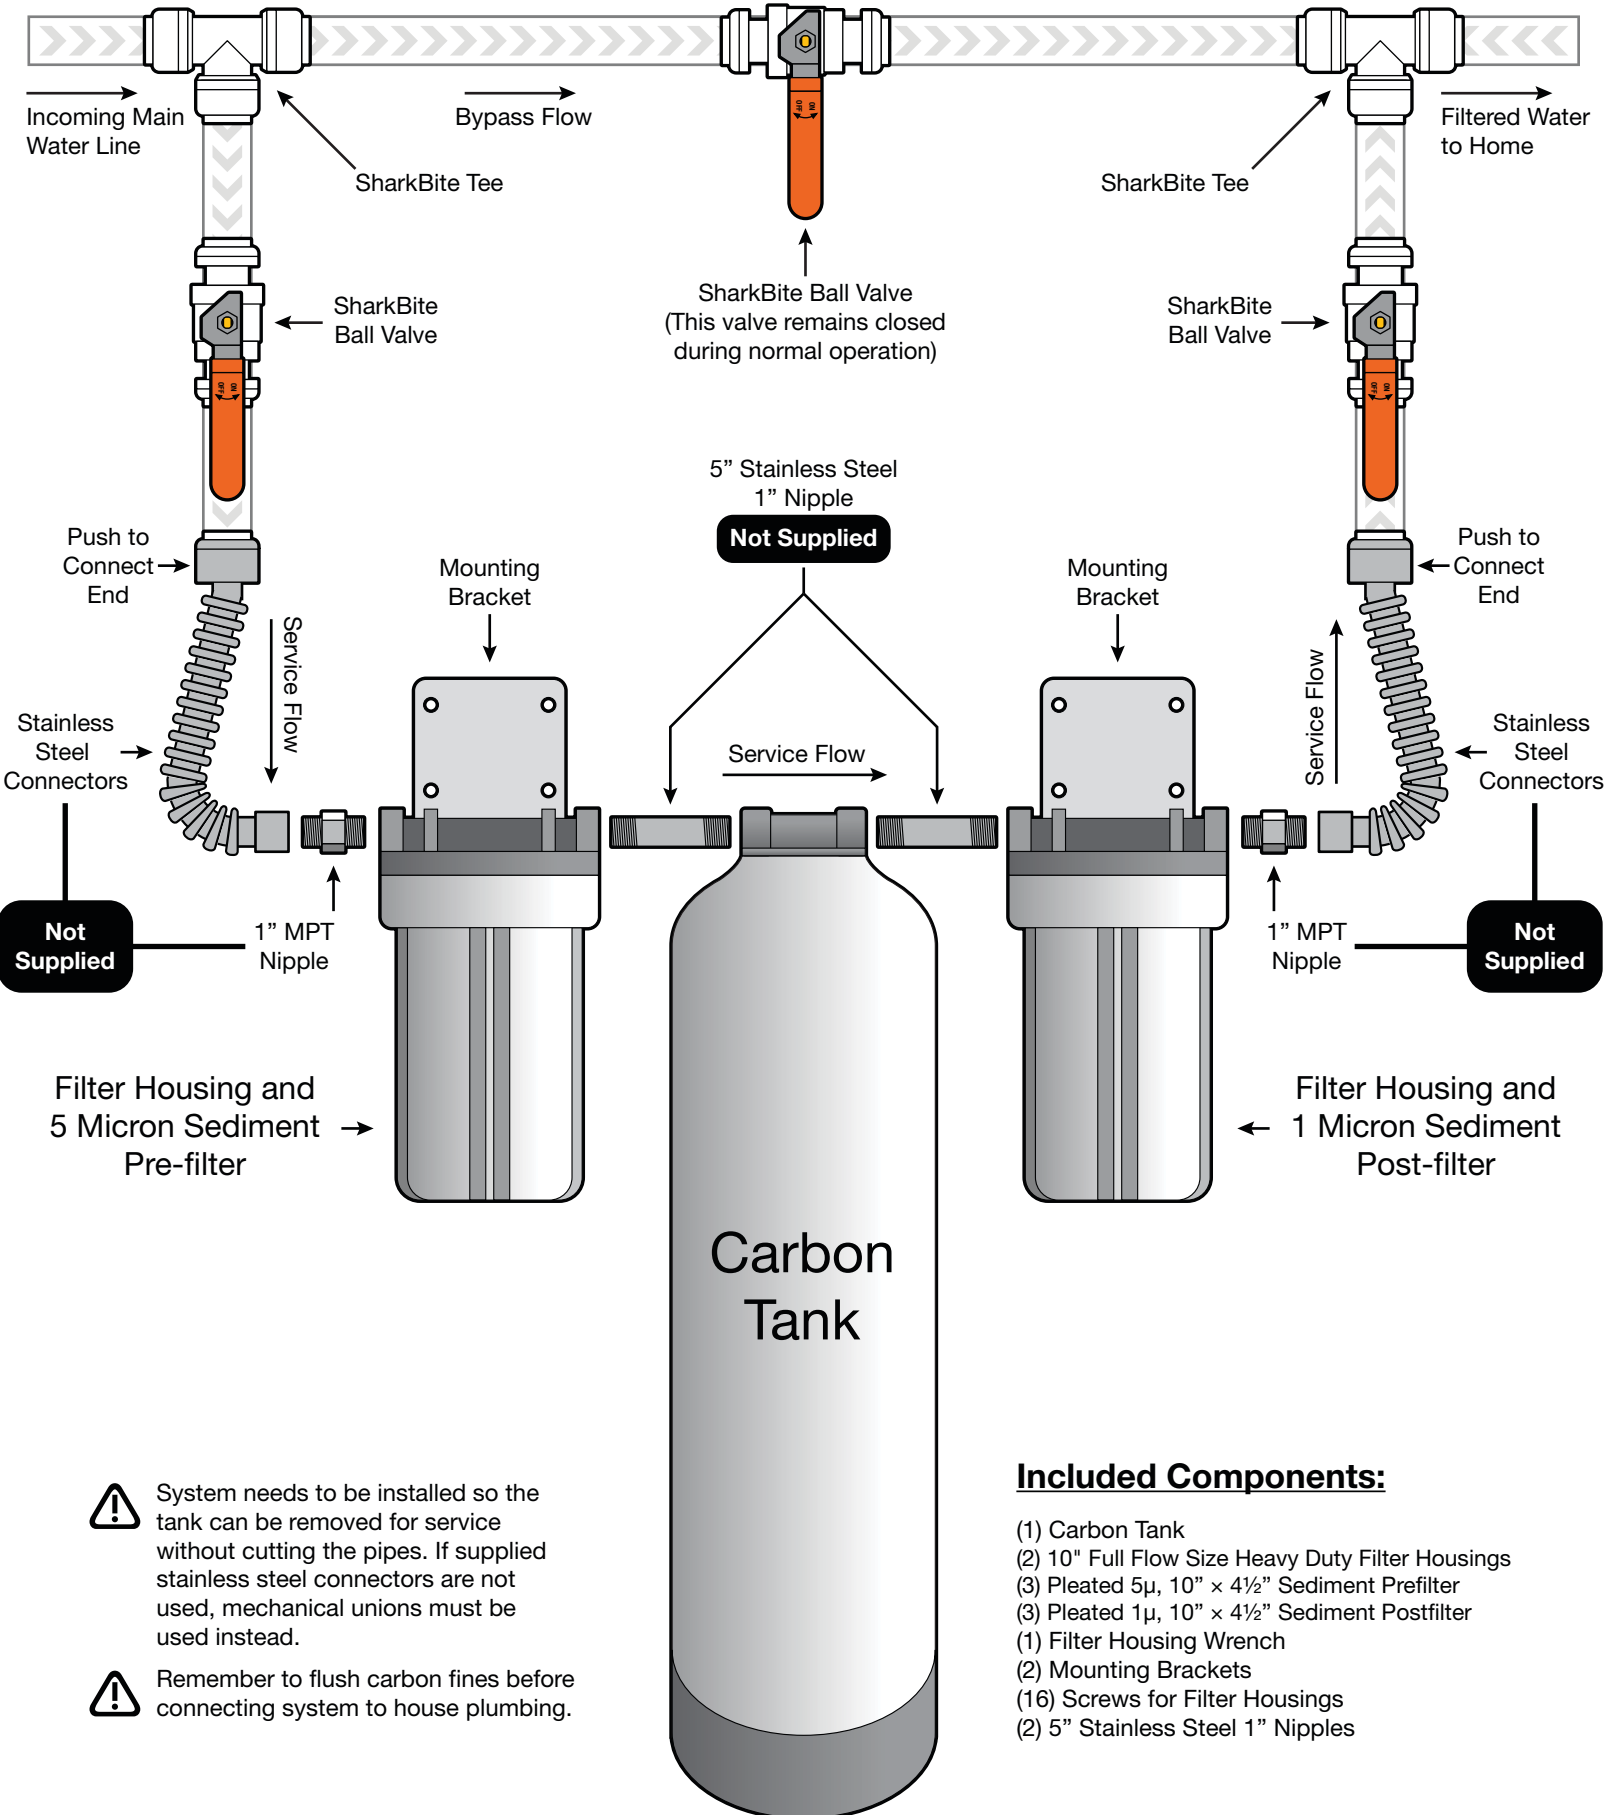

⚠ System needs to be installed so the tank can be removed for service without cutting the pipes. If supplied stainless steel connectors are not used, mechanical unions must be used instead.

⚠ Remember to flush carbon fines before connecting system to house plumbing.

Included Components:

- (1) Carbon Tank
- (2) 10" Full Flow Size Heavy Duty Filter Housings
- (3) Pleated 5 μ , 10" \times 4 $\frac{1}{2}$ " Sediment Prefilter
- (3) Pleated 1 μ , 10" \times 4 $\frac{1}{2}$ " Sediment Postfilter
- (1) Filter Housing Wrench
- (2) Mounting Brackets
- (16) Screws for Filter Housings
- (2) 5" Stainless Steel 1" Nipples