



H2O-US4-200

Quick-Connect Installation

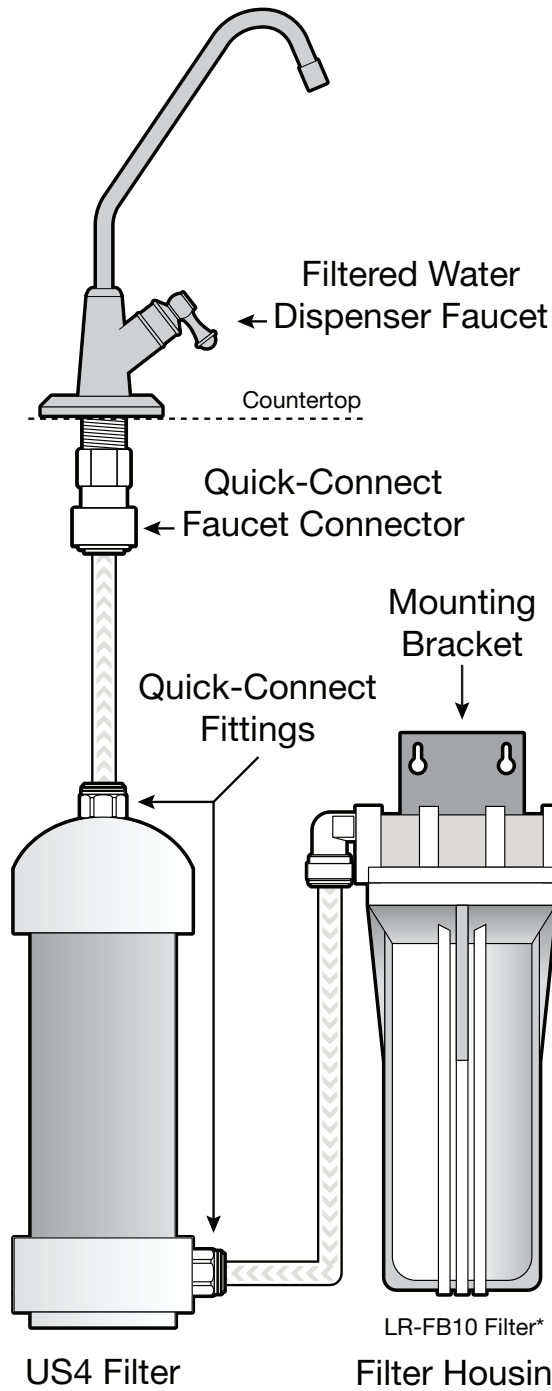


1.) HOW TO CONNECT QUICK-CONNECT FITTINGS




Insert tube and push through the o-ring to the tube stop

2.) HOW TO DISCONNECT FITTINGS



Push in collet against face of fitting and hold. Remove tube. Fitting can be reused

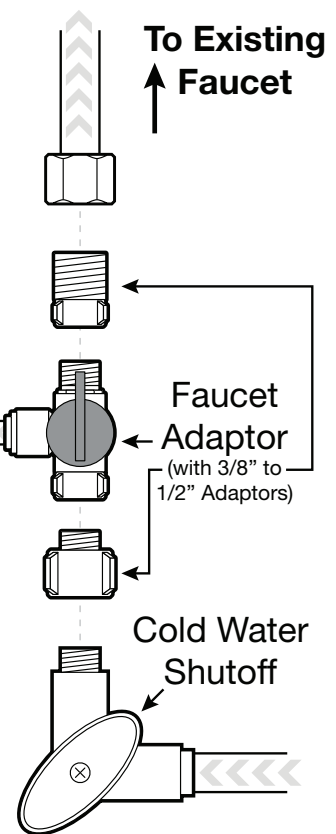

Enclosed Parts List:

- (1) 6' x $\frac{3}{8}$ " Tubing
- (1) $\frac{3}{8}$ " Faucet Adaptor w/ $\frac{1}{2}$ " Adaptors
- (1) $\frac{3}{8}$ " Quick-Connect Faucet Connector
- (1) Long Reach Faucet
- (1) Housing Wrench

Replacement Parts:

- Pentek® LR-FB10
- US4-I KDF/GAC Filter

H2O-US4-200

System Installation

US4-200 Installation Instructions **For 3/8" riser tubes**

1. Clear space under sink and decide where to locate filter.
2. Connect the faucet adaptor by turning off the cold water shutoff valve and removing the riser tube that goes to your sink faucet from the shutoff valve. The faucet adaptor threads right on to the top of this valve (make sure rubber washer is in faucet adaptor's female side). Then thread your riser tube on to the top male side of the faucet adaptor.
3. Use a center punch to make a small indentation in a stainless steel sink. Then use a standard drill bit to drill a hole through the sink. Start with a small drill and then switch to a larger one to increase the size of the hole in the sink. Continue this process until the hole is large enough to accommodate the faucet stem.
4. Remove the parts package from the faucet box. Slide the trim piece over the faucet stem first. Then slide the thicker rubber washer followed by the large flat washer and finally the largest rubber washer.
5. Place the faucet stem into the hole in the sink.
6. Have someone hold the faucet in the desired direction from the top of the sink. From below, use the locking washer and nut to secure the faucet in place by tightening with a wrench.
7. Connect tubing from the faucet adaptor quick-connect port to the inlet side of the H2O US4 filter unit. The faucet adaptor and the US4 use John Guest super speed fittings. These fittings connect & disconnect without tools and never leak. Simply take the end of the tubing and push it into the fitting until it bottoms out, then pull to make sure it is snugly in the fitting. The tubing must be cut straight without any frayed ends. To disconnect, pinch the collet (the part that moves) down from both sides. The tubing can be easily pulled out. A brochure on the fittings is enclosed for reference.
8. Use the same process to connect the outlet side of the H2O US4 unit. Connect the outlet tubing up to the filtered water faucet.
9. Flip the filtered water faucet lever up to hold it in the open position.
10. Make sure the faucet adaptor valve is open (valve handle pointed towards the quick-connect port) and open the cold water shutoff valve and let water run through the filter and exit through the faucet. Let water run through the unit for 10 minutes to activate the cartridge.
11. Close the faucet lever and check all fittings for leaks.